



DNH^{AS}

N-3770 Kragerø
NORWAY
Phone: (47) 35 98 56 00
Fax: (47) 35 98 56 10
E-mail: dnh@dnh.no
Web-site: www.dnh.no

DNH WW Ltd.
England
Phone:.....(44) 1908 275 000
Fax:.....(44) 1908 275 100
E-mail:.....dnh@dnh.co.uk

DNH GmbH
Germany
Phone:.....(49) 040 6569 30-0
Fax:.....(49) 040 6569 30-30
E-mail:.....dnh@dnh.de


DNH Speakers Inc.
USA
Phone:.....(1) 484 494 5790
Fax:.....(1) 484 494 5793
E-mail:.....dnh@dnhspeakers.com

VES-561(T)

ISO 9001 CERTIFIED

Rec. cutout diameter 143-147mm

2x M20 knock out
2x M12 knock out

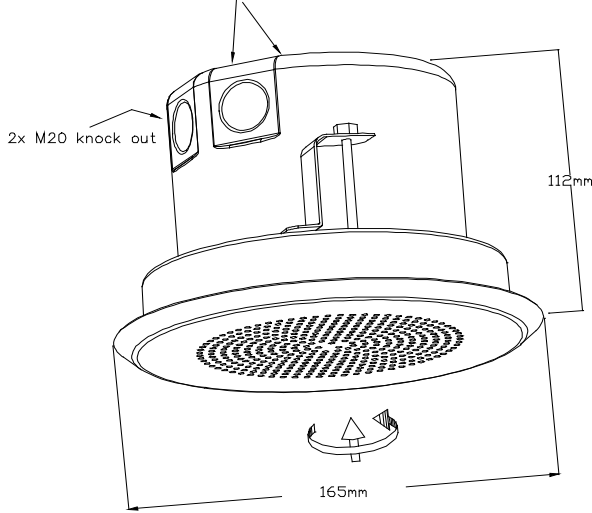


Transformer:
Combined
70/100Volt line
White : Red 100 V
White : Green 70 V

Secondary nominal
tappings:
C : 6 6,0 W
C : 3 3,0 W
C : 1,5 1,5 W
C : 0,5 0.5 W

Acc. British Standard 5839

Sound pressure levels at different frequencies at 1W/1m
1/3 octave pink noise.

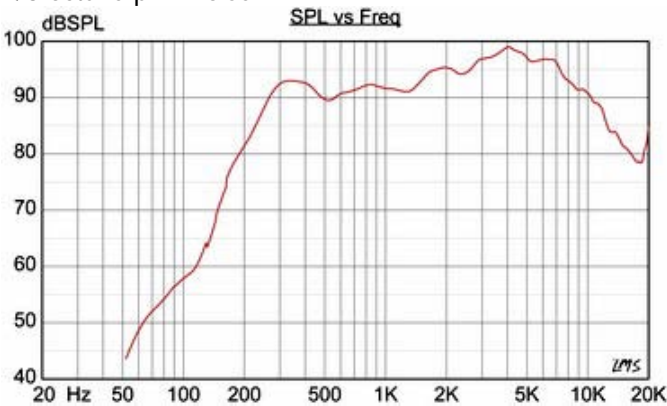

Material / Color Steel / Alu / White
Mounting 3 screws
Termination Ceramic terminals
Weight 1,1 kg
IP-rating
Max. / min. amb. temp 90°C / -20°C
Standard version 100 V transformer
Rated / max. power 6 W / 8 W
SPL 1W/1m 90 dB
SPL rated power 97 dB
Effective freq. range 180 – 12000 Hz
Dispersion (-6dB) 1kHz / 4kHz 185° / 80°
Directivity factor, Q
Options Impedance, color, label

Installation, Operation and Maintenance Procedures

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received.
- Install box by turning 3 screws clockwise and the 3 hooks will keep loudspeaker in position. Connect cable to terminal and screw loudspeaker grill clockwise into fixed position.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

